



# Canon PowerShot A630 Memory Card Replacement

This guide will show you how to replace your memory card. Your memory card will need to be replaced if it is full and you do not wish to delete photos or if it is damaged.

Written By: Kelly Duggan



## INTRODUCTION

Replace memory card

## Step 1 — Open Battery Door



- Locate battery door latch

## Step 2



- Slide the tab on the battery door while pushing the battery door away from the camera.
- Battery door should pop open



## Step 3



- Press down on memory card and release so that the memory card pops up
- Remove memory card

## Step 4



- Insert new memory card into the proper slot.

To reassemble your device, follow these instructions in reverse order.